# Medical Equipment & Healthcare furniture









www.pharmacy-shelving.co.uk



#### Dispensary Solutions, RX Shelving & Pharmacy Design Smart solutions for your pharmaceutical storage requirements – X Y Z series

FPD Group Ltd supply a huge range of dispensary equipment to pharmacy shopfitters and healthcare organisations. Our design team are available to answer architects, estimators and end users questions.

Manufacturing facilities include timber, metal, glass and plastic fabrication. If you need a unique reception counter or non standard fixture do not hesitate to send a rough sketch with photographic examples of what you would like produced.

Please browse through our product collections, if you cannot find a system that suits your requirements call our sales team.







Y Series Pharmacy Pullout Shelves



Z Series Pharmacy Drawer Systems

FPD Group Ltd X Y Z Series products are used by pharmacy establishments throughout the world.

......Place your trust in proven dispensary storage components.



Pharma-Fit



Pharmacy Shopfitting Shelving



**FPD Group Limited** 

The Innovation Centre University of Exeter, Rennes Drive Exeter, EX4 4RN

Tel 0113 350 8696 Fax 0115 727 0123





#### X Series - Pharmacy Drawer Systems

The X series combines a range of highly popular pharmacy drawer systems that are used throughout Europe. Designed specically for the storage of medicines within pharmacies and healthcare facilities the robost structure efficiently provides high density medicine storage with a minimal use of floor space.

- High quality design and materials used, the robost design significantly increases the lifetime
  of the drawers far exceeding the lifetime of timber drawer systems and inferior products.
- Angled drawers enable FIFO prinicple of drug storage
- Mesh drawer bottoms prevent collection of dust and increase visiblity of medicine packs from below
- Clear Labelling
- Drawers fully extended increasing storage capacity finishes Cladding packs available in a wide range of

#### **Products**

#### **HX Pharmacy Drawer System**

Full height high density medicine storage drawers.

#### **LX Pharmacy Drawer System**


Angle drawers to increase visibility of medicines and enable FIFO principle.

#### **VX Pharmacy Drawer System**

'V' shaped drawers increasing medicine visibility and enable FIFO principle

#### **BX Pharmacy Bench Drawer System**

Flexible bench drawer units with wide choice of sizes and accessories.



Divider System



Double Depth Drawer



Drawer Front



**Extended Drawer** 



Drawer with Clear Sides



Mesh Bottom



Drawer Front Labelling Kit



Pullout Step



**HX Pharmacy Drawer System** 



LX Pharmacy Drawer System




#### **HX Pharmacy Drawer System**

The HX Drawer System is the most commonly used drawer for pharmacy storage. Made with high-quality materials the greatest care is even taken over the smallest details, to produce drawers of the highest standard.

- Thanks to its total, telescopic extraction, maximum capacity combined with a considerable saving of space are guaranteed ( 10% more in comparison with the traditional drawer ) result in an increased overall capacity of the whole structure.
- All the drawers have transparent sides and upper drawers have a transparent base to make
  it easy to identify all the products.
- A large range of accessories and separators are available, enabling the drawers to be easily labelled and divided.
- · Central locking is also available.
- · Optional timber drawers fronts and cladding packs available in a wide range of finishes.
- · Customised configurations available.

#### **Dimensions**

	_	_	HX1_110T	_
Item Code	FPD-09967	FPD-09968	FPD-09969	FPD-09970
Height	2,200mm	2,200mm	2,200mm	2,200mm
Depth	814mm	1,031mm	1,131mm	1,231mm
Width	434mm	434mm	434mm	434mm
Fronts Height	105-140-210-280//125-250mm			
Inside Depth	650mm	900mm	1,000mm	1,100mm
Inside Width	2 x 170mm	2 x 170mm	2 x 170mm	2 x 170mm
Inside Height	100-135-205-275//120-245mm			



Drawer with Clear Sides



Mesh Bottom



Drawer Front Labelling Kit



Pullout Step



**HX Pharmacy Drawer System** 



HX Pharmacy Drawer System with Cold Storage Unit





#### VX Pharmacy Drawer System

The most important requirement for optimising stock flow in an efficient pharmacy storage system is to concentrate the largest amount of medicines in the least space as close as possible to the work station. The VX Drawer System with its unusual inclined bottom, has a number of benefits:

- The product standing upright enables easy reading of the labels facing the outside of the drawer.
- The angled bottom allows the product to fall to the front to facilitate picking up (FIFO medicine storage).
- The drawers partition provide transparent label holders to allow easy reading of bar codes.
- Shorter searching time as the sides of the drawers are transparent.
- The stock holding capacity is improved.
- Total visibility without need of using stools to see the highest drawers.
- Telescopic extraction which allows improves space utilisation.
- 16 VX Drawers per bay.
- · Optional timber drawers fronts and cladding packs available in a wide range of finishes.
- Customised configurations available.

#### **Dimensions**

	VX_105T	VX_125T
Item Code	FPD-09959	FPD-09960
Height	2,164mm	2,164mm
Depth	1,031mm	1,231mm
Width	472mm	472mm
Fronts Height	125-250mm	125-250mm
Inside Depth	900mm	1,100mm
Inside Width	2 x 200mm	2 x 200mm
Inside Height	110mm	110mm







Double Depth Drawer



**Drawer Front** 



**Extended Drawer** 



VX Pharmacy Drawer System



VX Drawer System with Drawer One Drawer Fully Extended



#### LX Pharmacy Drawer System

The most important requirement for optimising stock flow in the modern pharmacy is to concentrate the largest amount of medicines in the least space as close as possible to the work station. The VX Drawer System with its unusual inclined bottom, has a number of benefits:

- The product standing upright enables easy reading of the labels facing the outside of the drawer.
- The angled bottom allows the product to fall to the front to facilitate picking up (First In First Out).
- The drawers partition provide transparent label holders to allow easy reading of bar codes.
- Shorter searching time as the sides of the drawers are transparent.
- · The stock holding capacity is improved.
- · Total visibility without need of using stools to see the highest drawers.
- Telescopic extraction which allows improves space utilisation.
- 16 LX Drawers per bay.
- Optional timber drawers fronts and cladding packs available in a wide range of finishes.
- · Customised configurations available.
- LX-It Drawers slope from left low to right high.
- LX-rt Drawers are the mirror image sloping from right low to left high.

#### **Dimensions**

			LX-rt_105T	
Item Code	FPD-09962	FPD-09963	FPD-09964	FPD-09965
Height	,	,	2,164mm	,
Depth	,	, -	1,031mm	, -
Width			267mm	
Fronts Height	125-250mm	125-250mm	125-250mm	125-250mm
Inside Depth	900mm	1,100mm	900mm	1,100mm
Inside Width	200mm	200mm	200mm	200mm
Inside Height	110mm	110mm	110mm	110mm



Divider System



Double Depth Drawer



**Drawer Front** 



Extended Drawer



Seven Bay LX Drawer System



LX Drawer Extended





#### BX Pharmacy Bench Drawer System

With four depths and five different widths, the BX Drawer System can solve almost all the space problems in a pharmacy, medical store or office. This system is available as a self-supporting structure it can be panelled to obtain plain economic counters. The built-in structure can be placed into pre-set existing spaces.


- · A large range of accessories and separators are available, enabling the drawers to be easily labelled and divided.
- · Central locking is also available.
- Optional timber drawers fronts and cladding packs available in a wide range of finishes.
- · Customised configurations available.


#### **Dimensions**

	BX_50T	BX_55T	BX_60T	
Item Code	FPD-09972	FPD-09973	FPD-09974	
Depth	488.5mm	538.5mm	588.5mm	
Width	434-498-620-716-806mm			
Height	580-650-720-800-940mm			
Inside Width S	2 x 170mm	2 x 170mm	2 x 170mm	
Inside Width M	2 x 202mm	2 x 202mm	2 x 202mm	
Inside Width L	3 x 170mm	3 x 170mm	3 x 170mm	
Inside Width M3	3 x 202mm	3 x 202mm	3 x 202mm	
Inside Width L4	4 x 170mm	4 x 170mm	4 x 170mm	
Inside Height	100-135-205-275mm			




Double Drawer







Drawer without Longitudinal Divider



M3 Drawer




L4 Drawer



Waste Materials Drawer



Drawer for Spatulas



Drawer for Preparations



Homeopathy Drawer



**BX Bench Drawers** 



BX Bench Drawers Open



Healthcare Workspace Specialists

#### **Design Services**

Our designers can offer expertise in designing pharmacies, surgeries and healthcare facilities. With vast experience in both new build facilities and refurbishment of existing installations our designers are well placed to offer the best services possible.


#### **Process**

#### 1. Preliminary Discussions

Start the design process by providing as much information as possible about the premises, send sketches, plans or photos to sales@pharmacy-shelving.co.uk. Better still call us at an early stage of your project and a sales consultant will explain exactly what is needed to achieve best results.

#### 2. Requirements & Process Flow

Specific requirements need to be discussed early in the project to avoid re-working designs. When designing the latest NHS regulations guidelines are always taken into account. A typical dispensing pharmacy process flow is shown in the diagram below:

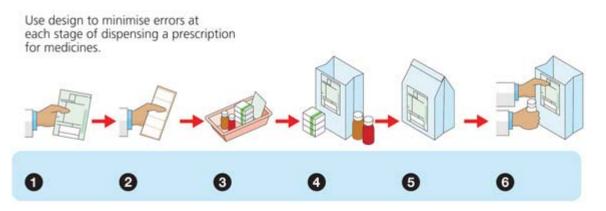

#### 3. Site Visit

It is not always necessary for FPD to visit your site. Providing accurate plans and photos are made available, specific requirements can be discussed during phone sessions alongside electronic transmission of draft ideas. FPD have sucessfully managed pharmacy equipment projects in the UK and Overseas, assisting both main contractors and end users without ever visiting premises, our methodology saves time and money for all parties involved.

#### 4. Delivery and Installation

Our job is to make sure your all equipment is received safely and when promised. FPD Group Ltd will make sure fitting teams are provided with adequate instructions and telephone support during installation. Most FPD systems sold are relatively easy to erect, we recommend a professional carpenter or experienced installer is selected in advance of any delivery, our sales team will support this contractor and make them aware of any additional fixings or special tools needed to complete works.

**FPD Group Limited** 

The Innovation Centre University of Exeter, Rennes Drive Fax 0115 727 0123 Exeter, EX4 4RN

Tel 0113 350 8696





Healthcare Workspace Specialists

#### **Installations**

FPD Group Ltd will make sure fitting teams are provided with adequate instructions and telephone support during installation. Most FPD systems sold are relatively easy to erect, we recommend a professional carpenter or experienced installer is selected in advance of any delivery, our sales team will support this contractor and make them aware of any additional fixings or special tools needed to complete works.

Let us know if you have difficulty in locating a suitable installer, it is possible we have someone in your region that will be pleased to provide a quotation.



**FPD Group Limited** 

The Innovation Centre University of Exeter, Rennes Drive Fax 0115 727 0123 Exeter, EX4 4RN

Tel 0113 350 8696





Healthcare Workspace Specialists

#### **How To Order**

#### **Selecting The Right Products**

Selecting the correct pharmacy storage and shelving products is largely dependent on your budgets and the space available. Our consultants can guide you through the process and advise you on the best solutions. If your looking to fit out your pharmacy please provide is with as much information as possible including floor plans, dimensions and photos.

#### NHS Purchase Order, MOD Purchase Order, Local Authority Purchase Order

All official government, NHS, MOD, Police, Educational and Local Authority purchase orders are accepted. Fax your purchase order to 0115 727 0123 or email to <a href="mailto-sales@pharmacy-shelving.co.uk">sales@pharmacy-shelving.co.uk</a>.

#### **Bank Transfer**

Sent bank transfers to:

Payee FPD Group Limited

Bank HSBC Bank plc

Sortcode 401903 IBAN GB97MIDL40190302074613

Account Number 02074613 Swift MIDLGB2104A

If possible send confirmation of your transaction, to speed up the order process.

#### Cheques

Make cheques payable to FPD Group Limited and post to:

FPD Group Limited The Innovation Centre University of Exeter, Rennes Drive Exeter, EX4 4RN

#### Credit/Debit Card

Payment from UK based businesses can be taken over the telephone or processed via the website <u>shopping cart</u>. Customers with issued quotations may process their order online using our <u>Purchase Code</u> web page.

#### **FPD Group Limited**

The Innovation Centre
University of Exeter, Rennes Drive
Tel
0113 350 8696
Fax
0115 727 0123

Exeter, EX4 4RN Email sales@pharmacy-shelving.co.uk



#### **Pharmacy Shelving Exports**

Since 1961 FPD Group Ltd's family have been supplying specialist storage equipment. Our extensive experience and technical knowledge now concentrates on providing clients with a quality selection of products for hospitals and healthcare organisations worldwide. We receive export enquiries and orders from all parts of the world and have established customers in UK, Europe, Africa and Asia. Export business activities are supervised by either our UK or Asia offices.

Our client base ranges from overseas ministry of health, defence, hospitals, surgeries, clinics and doctors to aid agencies and disaster relief. FPD Group Ltd export almost any medical product listed on our websites.

FPD estimators have the expertise to supply a single item or to fully equip many types of healthcare facilities. As well as the initial supply of equipment we also offer room design services using our in-house Autodesk Revit Architecture 2013 CAD systems.

\* Export items are normally subject to minimum order values, additional protective packing charges and export shipping costs. Prices shown are Ex Works unless otherwise agreed in writing.



**FPD Group Limited** 

The Innovation Centre University of Exeter, Rennes Drive Exeter, EX4 4RN Tel 0113 350 8696 Fax 0115 727 0123



### **FPD Group Limited**

Tel: 0115 871 8789

Fax: 0115 727 0123

Email: info@fpd-group.co.uk

Web: www.fpd-group.co.uk



## **FPDGROUP**